

EASY FOAM GUN CLEANER



EASY FOAM GUN CLEANER is a multi functional cleaner that is designed to digest and remove uncured PU foam. It is designed to allow the easy removal of uncured EASY FOAM from the majority of gun grade PU foam applicators. The unique designed plastic moulding is an “all-in-one” component that includes a threaded collar with integral sealing valve and gasket. These features ensure that it is compatible with the majority of PU foam applicators. Also incorporated into the component is a removable red aerosol actuator button, with a clear short plastic tube to allow application of fine accurate jets of cleaner direct to confined areas.

REMOVES UNCURED EASY FOAM
CLEANS APPLICATOR GUNS
EASY TO USE



TECHNICAL INFORMATION:

PRODUCT INFORMATION	
FORM:	AEROSOL
CONTAINS:	Acetone
HAZARD INFORMATION:	EXTREMELY FLAMMABLE - In use, may form flammable/ explosive vapour-air mixture. Irritating to eyes. Repeated exposure may cause skin dryness or cracking. Vapours may cause drowsiness and dizziness. Keep out of the reach of children. Keep container in a well-ventilated place. Do not breathe aerosol.
EXPLOSION LIMIT:	LEL = 0.6% Volume
DENSITY:	0.78
IGNITION POINT:	>250°C
CLEANING:	Clean tools, equipment, etc. using warm water.
PACKAGING:	500ml cans (12 per box)
STORAGE CONDITIONS:	Store in sealed containers in dry conditions, protected from extremes of temperature
SHELF LIFE:	Min 24 months when stored correctly

DIRECTIONS FOR USE:

Always connect/disconnect PU foam cleaner to the applicators with the canister in the upright position and at arm's length. This will avoid accidentally activating the pressurised container.

GUN APPLICATOR

Remove the clear transit cap and red actuator button. Place the applicator gun upside down and screw the upright canister on to the inverted gun. Do not over-tighten. This will break the integral sealing valve. Always operate the canister upside down and at arm's length, with the gun pointing away from the body. Press the trigger to push the solvent through the gun. Flush for at least 5 seconds and ensure the gun outlet tip is thoroughly cleaned. Place the canister upright; unscrew the canister whilst pressing the trigger. This ensures there is no build up of aerosol when disconnecting the gun applicator from the canister.

AEROSOL SPRAY

With the aerosol canister in the upright position, remove the clear transit cap. Ensure the red activator button is securely in place inside the black sealing valve. Hold the can inverted and push down onto the red actuator button to activate the aerosol. Direct the spray only onto the areas that require cleaning.

Replace the clear transit cap.

Collect all waste material into a suitable container and dispose in a safe manner. Do not attempt to clean applicators that are blocked with cured EASY FOAM.

IMPORTANT

This can contains a small volume of flammable propellant. When transported in cars, keep can in the boot, upright and out of direct sunlight. Safety data sheet available for professional user on request.